

Wireless Portable Presentation Systems

Important Information on Battery Care

Thank you for purchasing a Chiayo Portable PA System (PPS). To maximize the life and operation of the device it is important to read and follow the instructions below, keeping your unit and internal batteries in prime condition.

- Upon receipt and/or after first receiving your PPS, please charge the device for 10 hours prior to its first use.
- After a prolonged period of use your PPS may shut down as a result of battery drain. Do not continually reset the on/off switch, this will permanently damage the batteries. Place the unit on charge for a minimum 10 hour period or until fully charged.
- 3 Do not store your PPS with flat or discharged batteries or damage to the battery will almost certainly occur. Make sure batteries are fully charged especially if you know your device is to be left unused for a period of time (school holidays etc...); upon return fully recharge prior to use. If fully drained recharge as soon as possible.
- 4 Your PPS can be recharged after a short or small amount of use, the batteries do not need to be flat before recharging!
- 5 To prolong the use and life of your PPS, always switch off when not in use.
- 6 The internal batteries inside your PPS will naturally discharge, even if not used (just like a car battery). When not in regular use, it is best practice to do a full recharge of the device for a minimum of 10 hours at least once a month.
- 7 It is not recommended to leave your PPS on charge for longer than 24 hours.
- 8 The battery manufacturer warrants the batteries for no more than 3 months from your purchase date. Damage to batteries after this time will not be covered by any warranty.
- On average, the lifespan of your PPS batteries should be 12-24 months depending on type of use. It is advisable that the user understands that the batteries may need to be replaced within this time period.

Coach400 Focus 505 Focus 500 IR CHALLENGER 1004