

4KHDR

HDCP2.2

OR-88U-4K22

**8x8 HDMI Matrix Switcher with 8 USB Power Outputs
(4K/UHD, HDR, HDMI2.0, HDCP 2.2, 18Gbps)**

/// OPERATION MANUAL

DISCLAIMERS

The information in this manual has been carefully checked and is believed to be accurate. CYP (UK) Ltd assumes no responsibility for any infringements of patents or other rights of third parties which may result from its use.

CYP (UK) Ltd assumes no responsibility for any inaccuracies that may be contained in this document. CYP (UK) Ltd also makes no commitment to update or to keep current the information contained in this document.

CYP (UK) Ltd reserves the right to make improvements to this document and/or product at any time and without notice.

COPYRIGHT NOTICE

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means—electronic, mechanical, magnetic, optical, chemical, manual, or otherwise—without express written permission and consent from CYP (UK) Ltd.

© Copyright 2011 by CYP (UK) Ltd.

All Rights Reserved.

Version 1.1 August 2011

TRADEMARK ACKNOWLEDGMENTS

All products or service names mentioned in this document may be trademarks of the companies with which they are associated.

SAFETY PRECAUTIONS

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply.

Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not attach the power supply cabling to building surfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.

REVISION HISTORY

VERSION NO.	DATE	SUMMARY OF CHANGE
v1.00	12/03/2018	First release

CONTENTS






1. Introduction	6
2. Applications	6
3. Package Contents	6
4. System Requirements	7
5. Features.....	7
6. Operation Controls and Functions	8
6.1 Front Panel	8
6.2 Rear Panel.....	9
6.3 Remote Control	10
6.4 LCD Menu	11
6.5 IR Cable Pin Assignments	12
6.6 RS-232 Protocol.....	12
6.7 Telnet Control.....	13
6.8 RS-232 and Telnet Commands.....	14
6.9 WebGUI Control	26
7. Connection Diagram	38
8. Specifications.....	39
8.1 Technical Specifications	39
8.2 Video Specifications.....	40
9. Acronyms.....	42

1. INTRODUCTION








This 4K UHD 8 by 8 Matrix provides the ability to connect up to eight 4K UHD HDMI sources to up to eight 4K UHD HDMI displays and freely switch between them. This unit comes with full support for 18Gbps (600Mhz) resolutions up to, and including 4K@60Hz (4:4:4, 8-bit) as well as support for 16-bit Deep Colour up to 1080p60Hz, HDR (High Dynamic Range), HD audio and other features defined by the HDMI 2.0a specification. With a comprehensive EDID management feature that includes the ability to select between built in default EDID, EDID copied from connected sink devices, as well as a configurable EDID, this matrix can solve many interconnectivity problems.

This unit also features eight USB ports which supply up to 5V/1A power for use with connected AOC (Active Optical Cable) fiber cable extenders. By using these specialised cables your HDMI content can be extended much further than would be possible with normal HDMI cables. The built-in OSD has the ability to display user editable general information text so each output can display up to 2 lines of customised text on top of the video source in the colour of your choice. This unit provides an intuitive set of front panel controls with an LCD as well as RS-232, Telnet, WebGUI, and IR remote control options.

2. APPLICATIONS

-  Smart Home Control
-  Control Center
-  Function Room
-  Product Showroom
-  Ballroom

3. PACKAGE CONTENTS

-  1x8 by 8 HDMI Matrix
-  1xRemote Control (CR-177)
-  1xIR Extender Cable
-  1x24V/6.25A DC Power Adaptor
-  1xPower Cord
-  1xRack Mount Ears (Set of 2)
-  1xOperation Manual

4. SYSTEM REQUIREMENTS


- /// HDMI source equipment such as media players, video game consoles or set-top boxes.
- /// HDMI receiving equipment such as HDTVs, monitors or audio amplifiers.
- /// The use of "Premium High Speed HDMI" cables is highly recommended.

5. FEATURES

- /// HDMI 2.0a and DVI 1.0 compliant
- /// HDCP 1.x and 2.2 compliant
- /// Eight HDMI inputs matrixed to eight HDMI outputs with 18Gbps (600MHz) 4K UHD support
- /// Supports HD resolutions up to 3840×2160@60Hz (4:4:4, 8-bit) & 4096×2160@60Hz (4:4:4, 8-bit)
- /// Supports 16-bit Deep Colour up to 1080p@60Hz
- /// Supports pass-through of audio formats including LPCM 2.0/5.1/7.1, Bitstream, and HD Bitstream
- /// Supports six internal EDIDs, eight external EDIDs copied from connected devices, and four user provided EDIDs
- /// Eight USB ports to supply 5V/1A power to AOC (Active Optical Cable) fiber extension cables
- /// OSD with user customizable information text
- /// Controllable via front-panel buttons with LCD, WebGUI, Telnet, RS-232, and IR remote

6. OPERATION CONTROLS AND FUNCTIONS


6.1 Front Panel

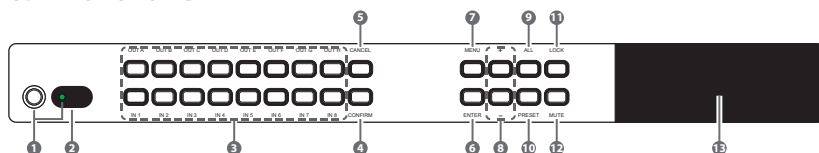

- 1 POWER:** Press this button to power the unit on (green LED) or place it into stand-by mode (red LED).
- 2 IR WINDOW:** Accepts IR signals from the included IR remote for control of this unit only.
- 3 IN 1~8 & OUT A~H:** Press the "OUT" keys (A~H) of the outputs you wish to route a source to (the letters will flash in the LCD to indicate selection). Next, press the "IN" key of the input (1~8) you wish to route to the selected outputs. Finally, press "CONFIRM" to confirm your selection and execute the routing change.
- 4 CONFIRM:** Press this button to confirm newly made input/output routing selections.
- 5 CANCEL:** Press this button to cancel newly made input/output routing selections before they have been confirmed.
- 6 ENTER:** Press to confirm a selection within the LCD menu or to go deeper into a menu item.
- 7 MENU:** Press to enter the LCD menu, or to back out from menu items.
- 8 PLUS (+) & MINUS (-):** Press to move up and down or adjust selections within menus.
- 9 ALL:** Press this button to select all outputs simultaneously for routing. Next, press the "IN" key of the input (1~8) you wish to route to all outputs. Finally, press "CONFIRM" to confirm your selection and execute the routing change.
- 10 PRESET:** Press to enter the preset recall menu in the LCD window. Press the "+/-" buttons followed by the "ENTER" button to select and activate the preferred preset.
- 11 LOCK:** Press to lock all button functions on the front panel. Press and hold for 3 seconds to release the lock function. The LCD will display "Lock" when the function is active.

- 12 **MUTE:** The “MUTE” button functions as a blank audio/video source. To use it, follow the standard matrix routing instructions, but use the “MUTE” button as the input to blank out the selected outputs. When a “MUTE” input is in use it will show up as “M” within the routing display.
- 13 **LCD WINDOW:** Displays the unit’s menu, settings and information.

6.2 Rear Panel

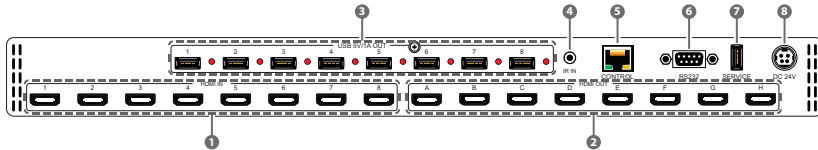


- 1 **HDMI IN 1~8:** Connect to HDMI source equipment such as media players, game consoles or set-top boxes.
- 2 **HDMI OUT A~H:** Connect the HDMI outputs to devices such as HDMI TVs, monitors or amplifiers for digital video and audio output.
- 3 **USB POWER OUTPUT 1~ 8:** Each USB port provides 5V/1A of power intended for use with HDMI over AOC (Active Optical Cables) fiber optic video extension cables. Power on each port may be individually enabled/disabled.

Note: If a USB device requiring more than 1A is connected, the port will automatically shut off to prevent an overload and the red LED will turn on.

- 4 **IR IN:** Connect to the provided IR Extender to extend the IR control range of the unit. Ensure that the remote being used is within direct line-of-sight of the IR Extender.
- 5 **CONTROL:** Connect directly, or through a network switch, to your PC/ laptop to control the unit via Telnet/WebGUI.
- 6 **RS-232:** Connect directly to a PC, laptop or other serial control device to send RS-232 commands to control the unit.
- 7 **SERVICE:** This slot is reserved for firmware update use only.
- 8 **DC 24V:** Plug the 24V DC power adapter into the unit and connect it to an AC wall outlet for power.

6.3 Remote Control


- 1 **POWER:** Press to power the unit on or place it into stand-by mode.
- 2 **1/A ~ 8/H:** Press these keys to configure the video routing. Press the "OUT" key followed by the keys (A~H) of the outputs you wish to route a source to (the letters will flash in the LCD to indicate selection). Next, press the "IN" key followed by the input (1~8) you wish to route to the selected outputs. Finally, press "ENTER" to confirm your selection and execute the routing change.
- 3 **INFO:** Switches the information displayed on each output's OSD between the user customised text and the current video/Ethernet details.
- 4 **MUTE:** The "MUTE" button functions as a blank audio/video source. To use it, follow the standard matrix routing instructions, but use the "MUTE" button as the input to blank out the selected outputs.
- 5 **PRESET:** Press to enter the preset call menu in the LCD window. Press the "+/-" buttons followed by the "ENTER" button to select and activate the preferred preset.
- 6 **ALL:** Press this key to select all outputs simultaneously for routing. Next, press the key of the input (1~8) you wish to route to all outputs. Finally, press "ENTER" to confirm your selection and execute the routing change.
- 7 **MENU:** Press to enter the LCD menu, or to back out from menu items.
ENTER: Press to confirm a selection within the LCD menu or to go deeper into a menu item.
CANCEL: Press to cancel newly made input/output/preset routing selections before they have been confirmed.
- 8 **Plus (+)/IN:** Press "+/IN" to navigate up within menus or to begin the selection of an input for routing.
- 9 **Minus (-)/OUT:** Press "-/OUT" to navigate down within menus or to begin the selection of outputs for routing.

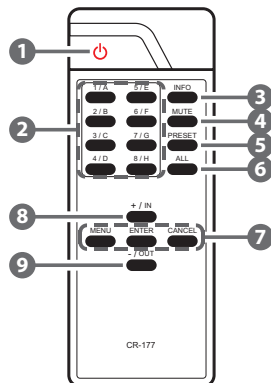

6.4 LCD Menu

LEVEL 1	LEVEL 2	LEVEL 3	LEVEL 4
Video Setup	EDID Setup	EDID Mode	Appoint Mode
			All Mode
		Appoint Mode EDID	IN1 ~ IN8
		All Mode EDID	IN1 ~ IN8
	Preset Setup	1 ~ 8	
	Downscale Setup	A ~ H	
Drivers Setup	USB Power Supply	A ~ H	
	Temperature	[Info Display]	
	Fan Ctrl.	Auto Mode	
		Always On Mode	
System Setup	Firmware	[Info Display]	
	Firmware Update	Yes/No	
	Factory Reset	Yes/No	
Network Status	[Info Display]		
Network Setup	Mode Static	IP:	
		Mask:	
		Gate:	
	Mode DHCP	[Info Display]	

6.5 IR Cable Pin Assignments

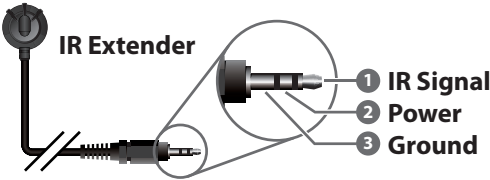

6.6 RS-232 Protocol

UNIT			REMOTE SYSTEM	
Pin	Definition		Pin	Definition
1	NC	▶ ◀	1	NC
2	TxD		2	RxD
3	RxD		3	TxD
4	NC		4	NC
5	GND		5	GND
6	NC		6	NC
7	NC		7	NC
8	NC		8	NC
9	NC		9	NC

Baud Rate: 19200bps
Data Bits: 8
Parity Bits: None
Stop Bits: 1
Flow Control: None

6.7 Telnet Control

Before attempting to use Telnet control, please ensure that both the unit and the PC/Laptop are connected to the same active networks.

To access Telnet	
In Windows 7	Click Start , type “cmd” in the search field, and press Enter .
In Windows XP	Click Start > Run , type “cmd”, and press Enter .
In Mac OS X	Click Go > Applications > Utilities > Terminal .

Once in the CLI (Command Line Interface) type “telnet” followed by the IP address of the unit and “23”, then hit “Enter”.

```
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\Administrator>telnet 192.168.1.50 23
```

This will connect us to the unit we wish to control. Type “help” to list the available commands.

Notes:

Commands will not be executed unless followed by a carriage return.

Commands are not case-sensitive.

If the IP address is changed then the IP address required for Telnet access will also change accordingly.

6.8 RS-232 and Telnet Commands

6.8.1 General & System Commands	
COMMAND	
DESCRIPTION	VARIABLES
HELP ↵	
Show the full command list.	
? ↵	
Show the full command list.	
SET FACTORY DEFAULT ↵	
Reset all settings to the factory defaults. Unit will automatically reboot.	
SET FACTORY IPCONFIG DEFAULT ↵	
Reset Ethernet settings to the factory defaults.	
SET FACTORY OUT ROUTE DEFAULT ↵	
Reset all routing to the factory defaults.	
SET POWER N1 ↵	
Turn the unit on or off (standby).	Available values for N1 : ON [Power On] STANDBY [Standby Mode]
GET POWER ↵	
Show the current power state.	
SET UART 1 BAUDRATE N1 ↵	
Set the baud rate of the RS-232 port to N1.	Available values for N1 : 4800 [Baud Rate] 9600 [Baud Rate] 19200 [Baud Rate] 38400 [Baud Rate] 57600 [Baud Rate] 115200 [Baud Rate]
GET UART 1 BAUDRATE ↵	
Show the current baud rate of the RS-232 port.	

6.8.1 General & System Commands

COMMAND		
DESCRIPTION	VARIABLES	
SET IR IN CHANNEL N1 ↵		
Set the IR remote channel to use.	N1 = 0 ~ 15	[IR Channel]
GET IR IN CHANNEL ↵		
Show the current IR remote channel.		
SET IR IN CUSTOM CODE N1 ↵		
Set the IR custom code.	N1 = 0000 ~ 7FFF	[Hex Code]
GET IR IN CUSTOM CODE ↵		
Show the current IR custom code.		
SET FAN CONTROL MODE N1 ↵		
Set the internal fan control mode.	Available values for N1: 0 [Always On] 1 [Auto]	
GET FAN CONTROL MODE ↵		
Show the current fan control mode.		
GET FAN N1 SPEED ↵		
Show the current RPM speed of fan N1.	N1 = 1 ~ 2	[Fan Number]
GET DEVICE TEMPERATURE ↵		
Show the unit's current temperature.		
SET USB N1 POWER SUPPLY N2 ↵		
Set the power state of USB port N1.	N1 = A ~ H [USB Port] Available values for N2: ON [Power On] OFF [Power Off]	
GET USB N1 POWER SUPPLY ↵		
Show the power state of USB port N1.	N1 = A ~ H	[USB Port]
SET KEYLOCK N1 ↵		
Enable or disable the front panel key lock.	Available values for N1: ON [Locked] OFF [Unlocked]	

6.8.1 General & System Commands

COMMAND	
DESCRIPTION	VARIABLES
GET KEYLOCK↵	
Show the current front panel key lock state.	
GET FW VER↵	
Show the unit's firmware version.	

6.8.2 Matrix Commands

COMMAND	
DESCRIPTION	VARIABLES
SET OUT N1 ROUTE N2↵	
Route input N2 to output N1.	N1 = A ~ H [Output Port] N2 = 1 ~ 8 [Input Port]
GET OUT N1 ROUTE↵	
Show the input currently routed to output N1 .	N1 = A ~ H [Output Port]
SET OUT ROUTE N1,N2,N3,...↵	
Set one or more input/output routing pair(s). <i>Note: Each routing pair consists of the output letter followed by the input number with no space between them. Additional routes are added by separating them with commas (without spaces). (For example: A8,B5,C3,etc.)</i>	N1 = {A~H}{1~8},{A~H}{1~8},...
SET ALL OUT ROUTE N1↵	
Set all outputs to display input N1.	N1 = 1 ~ 8 [Input Port]
GET ALL OUT ROUTE↵	
Show the current routing for all inputs and outputs.	

6.8.2 Matrix Commands

COMMAND		
DESCRIPTION	VARIABLES	
SET CURRENT ROUTE TO PRESET N1↵		
Save the current input/output routing to preset N1.	N1 = 1 ~ 8	[Preset Number]
SET ROUTE PRESET N1↵		
Load and activate routing preset N1.	N1 = 1 ~ 8	[Preset Number]
GET ROUTE PRESET N1↵		
Show the contents of routing preset N1.	N1 = 1 ~ 8	[Preset Number]
SET ROUTE PRESET N1 NAME N2↵		
Set the name of routing preset N1 to N2.	N1 = 1 ~ 8	[Preset Number] N2 = {Preset Name, 32 chars max}
GET ROUTE PRESET N1 NAME↵		
Show the current name of routing preset N1.	N1 = 1 ~ 8	[Preset Number]
SET OUT N1 MASK N2↵		
Enable or disable the A/V mute of output N1.	N1 = A ~ H	[Output Port] Available values for N2: ON [Mute A/V] OFF [Unmute A/V]
GET OUT N1 MASK↵		
Show the current A/V mute state of output N1.	N1 = A ~ H	[Output Port]
SET IN N1 NAME N2↵		
Set the name of input N1 to N2.	N1 = 1 ~ 8	[Input Port] N2 = {Input Name, 32 chars max}
GET IN N1 NAME↵		
Show the current name of input N1.	N1 = 1 ~ 8	[Input Port]

6.8.2 Matrix Commands

COMMAND	
DESCRIPTION	VARIABLES
SET OUT N1 NAME N2↵	
Set the name of output N1 to N2.	N1 = A ~ H [Output Port] N2 = {Output Name, 32 chars max}
GET OUT N1 NAME↵	
Show the current name of input N1.	N1 = A ~ H [Output Port]
GET IN NAME LIST↵	
Show the full list of all input port names.	
GET OUT NAME LIST↵	
Show the full list of all output port names.	
SET OUT N1 4K2K DOWNSCALE MODE N2↵	
Set the 4K to 1080P downscale mode for output N1.	N1 = A ~ H [Output Port] Available values for N2 : 0 [Bypass 4K] 2 [Downscale]
GET OUT N1 4K2K DOWNSCALE MODE↵	
Show the current downscale mode for output N1.	N1 = A ~ H [Output Port]

6.8.3 Test Pattern Commands

COMMAND	
DESCRIPTION	VARIABLES
SET PATTERN N1 MODE N2↵	
Enable or disable the test pattern on output N1.	N1 = A ~ H [Output Port] N2 = ON, OFF [Enable/Disable]
GET PATTERN N1 MODE↵	
Show the current state of the test pattern mode on output N1.	N1 = A ~ H [Output Port]

6.8.3 Test Pattern Commands

COMMAND	
DESCRIPTION	VARIABLES
SET PATTERN N1 TIMING N2↵	
Set the output timing and resolution for the test pattern on output N1.	N1 = A ~ H [Output Port] Available values for N2 : 6 [720p@60Hz] 10 [1080p@60Hz] 12 [720p@50Hz] 14 [1080p@50Hz] 22 [4K@25Hz] 24 [4K@30Hz] 25 [4K@50Hz] 27 [4K@60Hz]
GET PATTERN N1 TIMING↵	
Show the current output timing and resolution for the test pattern on output N1.	N1 = A ~ H [Output Port]
GET PATTERN TIMING LIST↵	
Show a list of all available test pattern output timings.	
SET PATTERN N1 TYPE N2↵	
Set the test pattern to use on output N1.	N1 = A ~ H [Output Port] Available values for N2 : 1 [Black] 2 [White] 3 [Red] 4 [Green] 5 [Blue] 6 [Magenta] 7 [Yellow] 8 [Cyan] 9 [Gray]
GET PATTERN N1 TYPE↵	
Show the current test pattern selected for use on output N1.	N1 = A ~ H [Output Port]

6.8.4 EDID Commands

COMMAND

DESCRIPTION	VARIABLES
SET ALL IN EDID MODE N1 ↵	
Enable or disable the “All Input” EDID mode.	Available values for N1 : ON [All Input] OFF [Appoint]
GET ALL IN EDID MODE ↵	
Show the current “All Input” EDID mode state.	
SET ALL IN EDID N1 ↵	
Set the EDID to use when the EDID mode is set to “All Input”.	Available values for N1 : 1 [Internal 1] 2 [Internal 2] 3 [Internal 3] 4 [Internal 4] 5 [Internal 5] 6 [Internal 6] 7 [User 1] 8 [User 2] 9 [User 3] 10 [User 4] 11 [User 5] 12 [User 6] 13 [User 7] 14 [User 8] 15 [Sink A] 16 [Sink B] 17 [Sink C] 18 [Sink D] 19 [Sink E] 20 [Sink F] 21 [Sink G] 22 [Sink H]

6.8.4 EDID Commands

COMMAND

DESCRIPTION	VARIABLES																																												
GET ALL IN EDID↵																																													
Show the EDID selected for use in the "All Input" EDID mode.																																													
SET IN N1 EDID N2↵																																													
Set EDID N2 as the EDID to use with input N1 in "Appoint" mode.	<p>N1 = 1 ~ 8 [Input Port]</p> <p>Available values for N2:</p> <table> <tr><td>1</td><td>[Internal 1]</td></tr> <tr><td>2</td><td>[Internal 2]</td></tr> <tr><td>3</td><td>[Internal 3]</td></tr> <tr><td>4</td><td>[Internal 4]</td></tr> <tr><td>5</td><td>[Internal 5]</td></tr> <tr><td>6</td><td>[Internal 6]</td></tr> <tr><td>7</td><td>[User 1]</td></tr> <tr><td>8</td><td>[User 2]</td></tr> <tr><td>9</td><td>[User 3]</td></tr> <tr><td>10</td><td>[User 4]</td></tr> <tr><td>11</td><td>[User 5]</td></tr> <tr><td>12</td><td>[User 6]</td></tr> <tr><td>13</td><td>[User 7]</td></tr> <tr><td>14</td><td>[User 8]</td></tr> <tr><td>15</td><td>[Sink A]</td></tr> <tr><td>16</td><td>[Sink B]</td></tr> <tr><td>17</td><td>[Sink C]</td></tr> <tr><td>18</td><td>[Sink D]</td></tr> <tr><td>19</td><td>[Sink E]</td></tr> <tr><td>20</td><td>[Sink F]</td></tr> <tr><td>21</td><td>[Sink G]</td></tr> <tr><td>22</td><td>[Sink H]</td></tr> </table>	1	[Internal 1]	2	[Internal 2]	3	[Internal 3]	4	[Internal 4]	5	[Internal 5]	6	[Internal 6]	7	[User 1]	8	[User 2]	9	[User 3]	10	[User 4]	11	[User 5]	12	[User 6]	13	[User 7]	14	[User 8]	15	[Sink A]	16	[Sink B]	17	[Sink C]	18	[Sink D]	19	[Sink E]	20	[Sink F]	21	[Sink G]	22	[Sink H]
1	[Internal 1]																																												
2	[Internal 2]																																												
3	[Internal 3]																																												
4	[Internal 4]																																												
5	[Internal 5]																																												
6	[Internal 6]																																												
7	[User 1]																																												
8	[User 2]																																												
9	[User 3]																																												
10	[User 4]																																												
11	[User 5]																																												
12	[User 6]																																												
13	[User 7]																																												
14	[User 8]																																												
15	[Sink A]																																												
16	[Sink B]																																												
17	[Sink C]																																												
18	[Sink D]																																												
19	[Sink E]																																												
20	[Sink F]																																												
21	[Sink G]																																												
22	[Sink H]																																												

6.8.4 EDID Commands

COMMAND		
DESCRIPTION	VARIABLES	
GET IN N1 EDID↵		
Show the EDID currently used with input N1.	N1 = 1 ~ 8	[Input Port]
GET ALL IN EDID LIST↵		
Show the current EDID selections for all inputs.		
GET IN EDID LIST↵		
Show the full list of available EDIDs.		
SET EDID N1 NAME N2↵		
Set a custom name for EDID N1. <i>Note: Only User EDIDs may be renamed.</i>	N1 = 7~14 N2 = {EDID Name, 32 chars max}	[User EDID]
GET EDID N1 NAME↵		
Show EDID N1's current name.	N1 = 1 ~ 22	[EDID Number]
GET INTERNAL N1 EDID DATA↵		
Show the contents of Internal EDID N1 as hex data.	N1 = 1 ~ 6	[Internal EDID]
SET USER N1 EDID DATA N2↵		
Set the EDID data used by User EDID N1. <i>Note : The data block is comma-delimited and cannot contain any spaces.</i>	N1 = 1 ~ 8 N2 = {EDID data, 256 hex pairs. Ex : 00,FF,A1,...}	[User EDID]
GET USER N1 EDID DATA↵		
Show the contents of User EDID N1 as hex data.	N1 = 1 ~ 8	[User EDID]
GET SINK N1 EDID DATA↵		
Show the contents of the EDID from output N1 as hex data.	N1 = A ~ H	[Output Port]
GET IN N1 EDID DATA↵		
Show the contents of the EDID used on input N1 as hex data.	N1 = 1 ~ 8	[Input Port]

6.8.5 HDCP Commands

COMMAND	
DESCRIPTION	VARIABLES
SET IN N1 HDCP MODE N2↵	
Set the HDCP mode for input N1.	N1 = 1 ~ 8 [Input Port] Available values for N2 : 0 [HDCP Disabled] 1 [Follow Source] 2 [Follow Display]
GET IN N1 HDCP MODE↵	
Show the current HDCP mode of input N1.	N1 = 1 ~ 8 [Input Port]
GET IN N1 HDCP STATUS↵	
Show the current HDCP status of the source connected to input N1.	N1 = 1 ~ 8 [Input Port] Available result codes: 0 [HDCP OFF] 1 [HDCP 1.x] 2 [HDCP 2.2]
GET OUT N1 HDCP STATUS↵	
Show the current HDCP status of output N1.	N1 = A ~ H [Output Port] Available result codes: 0 [HDCP OFF] 1 [HDCP 1.x] 2 [HDCP 2.2] 3 [HDCP 1.x Failed] 4 [HDCP 2.2 Failed]
GET IN N1 HDCP ABILITY↵	
Show the HDCP capability supported by input N1.	N1 = 1 ~ 8 [Input Port] Available result codes: 0 [No HDCP] 1 [HDCP 1.x] 2 [HDCP 2.2] 3 [HDCP 1.4+2.2]

6.8.5 HDCP Commands

COMMAND	
DESCRIPTION	VARIABLES
GET OUT N1 HDCP ABILITY↵	
Show the HDCP capability detected from the display connected to output N1.	N1 = A ~ H [Output Port] Available result codes: 0 [No HDCP] 1 [HDCP 1.x] 2 [HDCP 2.2]

6.8.6 Ethernet Commands

COMMAND	
DESCRIPTION	VARIABLES
SET IP MODE N1↵	
Set the IP address assignment mode.	Available values for N1 : 0 [Static IP Mode] 1 [DHCP Mode]
GET IP MODE↵	
Show the current IP mode.	
GET IPCONFIG↵	
Show the current complete IP configuration.	N1 = X.X.X.X [X = 0 ~ 255]
SET IPADDR N1↵	
Set the static IP address.	
GET IPADDR↵	
Show the current static IP address.	
SET NETMASK N1↵	
Set the netmask address.	N1 = X.X.X.X [X = 0 ~ 255]
GET NETMASK↵	
Show the current netmask.	
SET GATEWAY N1↵	
Set the gateway address.	N1 = X.X.X.X [X = 0 ~ 255]

6.8.6 Ethernet Commands		
COMMAND		
DESCRIPTION	VARIABLES	
GET GATEWAY↵		
Show the current gateway.		
GET MAC ADDR↵		
Show the MAC address.		
SET TELNET PORT N1↵		
Set the Telnet port.	N1 = 0 ~ 65535	[Port Number]
GET TELNET PORT↵		
Show the current Telnet port.		
GET HOSTNAME↵		
Show the current hostname.		
SET WEBGUI LOGIN TIMEOUT N1↵		
Set the WebGUI idle timeout.	N1 = 0 ~ 100	[Seconds]
GET WEBGUI LOGIN TIMEOUT↵		
Show the current WebGUI idle timeout value.		
SET WEBGUI USERNAME N1↵		
Set the User login name for the WebGUI.	N1 = {User Name, 16 chars max}	
GET WEBGUI USERNAME↵		
Show the WebGUI User login name.		
SET WEBGUI PASSWORD N1↵		
Set the User login password for the WebGUI.	N1 = {User password, 16 chars max}	
GET WEBGUI PASSWORD↵		
Show the WebGUI User login password.		


Note: Commands will not be executed unless followed by a carriage return. Commands are not case-sensitive.

6.9 WebGUI Control

Device Discovery APP

Please obtain the “Device Discovery” software from your authorised dealer and save it in a directory where you can easily find it.


Connect the unit and your PC/Laptop to the same active network and execute the “Device Discovery” software. Click on “Find Devices on Network” and a list of devices connected to the local network will show up indicating their current IP address.

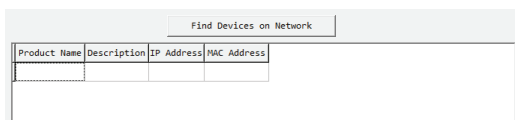

Product Name	Description	IP Address	MAC Address

Note: The unit's default IP address is 192.168.1.50.

By clicking on one of the listed devices you will be presented with the network details of that particular device.

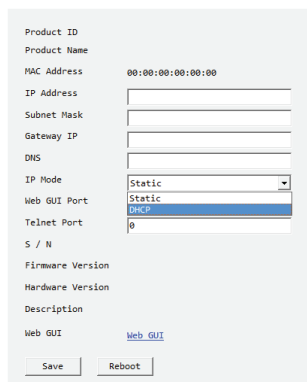

Product ID
Product Name
MAC Address 00:00:00:00:00:00
IP Address
Subnet Mask
Gateway IP
DNS
IP Mode Static
Web GUI Port Static
Telnet Port DHCP
S / N
Firmware Version
Hardware Version
Description
Web GUI [Web GUI](#)
Save Reboot

- **IP Mode:** If you choose, you can alter the static IP network settings for the device, or switch the unit into DHCP mode to automatically obtain proper network settings from a local DHCP server. To switch to DHCP mode, please select DHCP from the IP mode drop-down, then click “Save” followed by “Reboot”.
- **WebGUI:** Once you are satisfied with the network settings, you may use them to connect via Telnet or WebGUI. The network information window provides a convenient link to launch the WebGUI directly.

WebGUI Control Page

By default, both the Username and Password are “admin” for the WebGUI. The administrator password can be changed within the “System Settings” tab of the WebGUI if desired. The following function tabs will always display on left side of the WebGUI to aid with navigation.

The image shows the WebGUI interface. On the left is a 'Login' box with fields for 'Username' and 'Password', and a 'Submit' button. On the right is a vertical menu with the following items: 'Video Switch', 'Edid Settings', 'Device Settings', 'User Config', 'System Settings', and 'Admin - Logout' (highlighted in red).

Note: The unit's default IP address is 192.168.1.50.

1. Video Switch

This page provides video I/O routing, preset saving/loading, test pattern and OSD text configuration, and HDCP options.

The image shows the 'Video Switch' configuration page. On the left is a navigation menu with 'Video Switch' (selected), 'Edid Settings', 'Device Settings', 'User Config', 'System Settings', and 'Admin - Logout' (highlighted in red). The main area is titled 'Switch' and contains two sections: 'Output' and 'Input'.

Output Section:

Label	Source	Status	Action
OUTPUT A	from INPUT 1	Connected	[Edit]
OUTPUT B	from INPUT 1	Connected	[Edit]
OUTPUT C	from INPUT 2	Connected	[Edit]
OUTPUT D	from INPUT 2	Connected	[Edit]
OUTPUT E	from INPUT 3	Connected	[Edit]
OUTPUT F	from Pattern	Unconnected	[Edit]
OUTPUT G	from Pattern	Unconnected	[Edit]
OUTPUT H	from Pattern	Unconnected	[Edit]

Input Section:

Input: Pattern [Edit]

HDMI:

Label	Source	Status	Action
1	INPUT 1 3840x2160P@59	[Edit]	
2	INPUT 2 3840x2160P@23	[Edit]	
3	INPUT 3 1920x1080P@59	[Edit]	
4	INPUT 4 No Signal	[Edit]	
5	INPUT 5 No Signal	[Edit]	
6	INPUT 6 No Signal	[Edit]	
7	INPUT 7 No Signal	[Edit]	
8	INPUT 8 No Signal	[Edit]	

Video Routing

To begin assigning a new video route, please click the button of the HDMI output you wish to send video to and then click on the button of the preferred HDMI input port. If desired, you may select more than one output prior to selecting the input. As you select each button they will change their colour to orange. The new route will become active immediately after selecting the input port and the routing information displayed on the buttons will change accordingly.

Video Switch

Edit Settings

Device Settings

User Config

System Settings

Admin - Logout

Switch

Output

OUTPUT A

from

A INPUT 1

Connected

OUTPUT B

from

B INPUT 1

Connected

OUTPUT C

from

C INPUT 2

Connected

OUTPUT D

from

D INPUT 2

Connected

OUTPUT E

from

E INPUT 3

Connected

OUTPUT F

from

F Pattern

Unconnected

OUTPUT G

from

G Pattern

Unconnected

OUTPUT H

from

H Pattern

Unconnected

Input

Pattern

HDMI

1 INPUT 1

3840x2160P@59

2 INPUT 2

3840x2160P@23

3 INPUT 3

1920x1080P@59

4 INPUT 4

No Signal

5 INPUT 5

No Signal

6 INPUT 6

No Signal

7 INPUT 7


No Signal

8 INPUT 8

No Signal

Output Edit

A variety of output settings, including name, muting, test pattern configuration, downscaling, and OSD options can be configured here. Please click the “Edit” icon (✎) to open the Output Edit window.

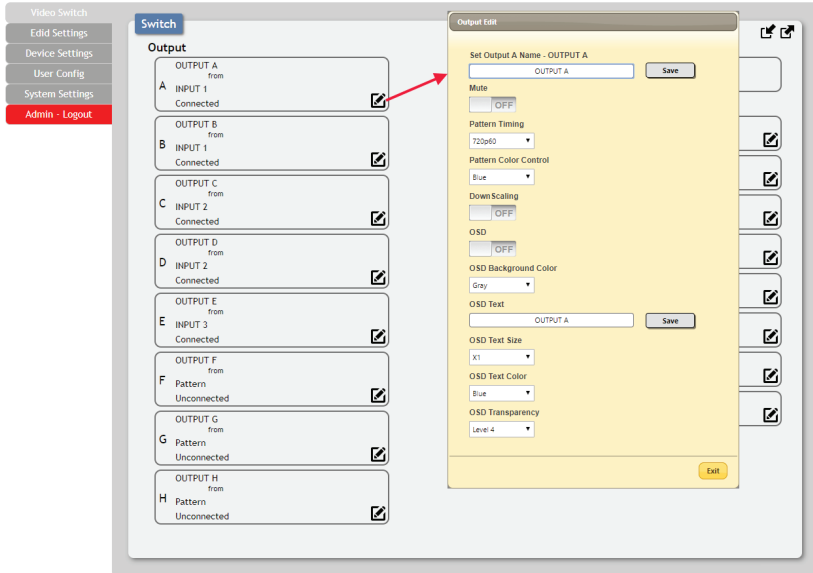

- **Set Output Name:** To rename the output port, type the new name in the space provided in the Edit window. Click the “Save” button to confirm the change.

Note: Blank spaces (“ ”) are not allowed in names.


- **Output Video Mute:** Each output can be individually muted (black video, no audio). To mute an output, please click on the switch so it reads “ON”.
- **Pattern Timing:** This setting configures the output resolution used when “Pattern” has been selected as the input source. The following resolutions are supported: 4K@25/30/50/60Hz, 1080P@50/60Hz and 720P@50/60.
- **Pattern Colour Control:** This setting configures the colour of the test pattern when “Pattern” is selected as the input source.
- **Downscaling:** This switch enables or disables the downscaling functionality of the output. When this setting is turned on, 4K sources

will be automatically downscaled to 1080p while maintaining the original framerate.

- **OSD:** This switch enables or disables the custom text display for this output. When enabled, the OSD text will be displayed in the upper-left corner of the selected output.
- **OSD Text Settings:** Each output can display up to 2 lines of customised OSD text. The text can be customised in content, colour, size, background colour & transparency. Please click the “Save” button after making changes to the text content. All other changes occur as soon as they are made.

Input Edit

Each input allows for Individual control over the name of the input and the behavior of HDCP. To edit the settings of an input port please click the “Edit” icon (✎).

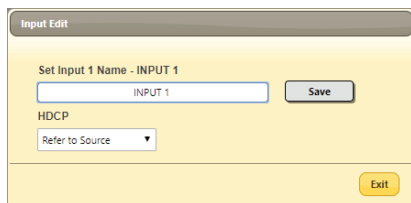


- **Set Input Name:** To rename the input port, type the new name in the space provided in the Edit window. Click the “Save” button to confirm the change.

Note: Blank spaces (“ ”) are not allowed in names.

- **HDCP:** There are 3 HDCP source behavior options available: HDCP Support Off, Refer to Source and Refer to Display. HDCP Support Off completely disables support for HDCP on that input. Refer to Source makes the input port support the same HDCP version as required by the connected source. Refer to Display makes the input support the HDCP version of the currently routed display.

Preset Setting

This matrix can store up to eight video routing presets. Presets can be utilised to store multiple different routing states in advance for rapid, hassle-free, recall.

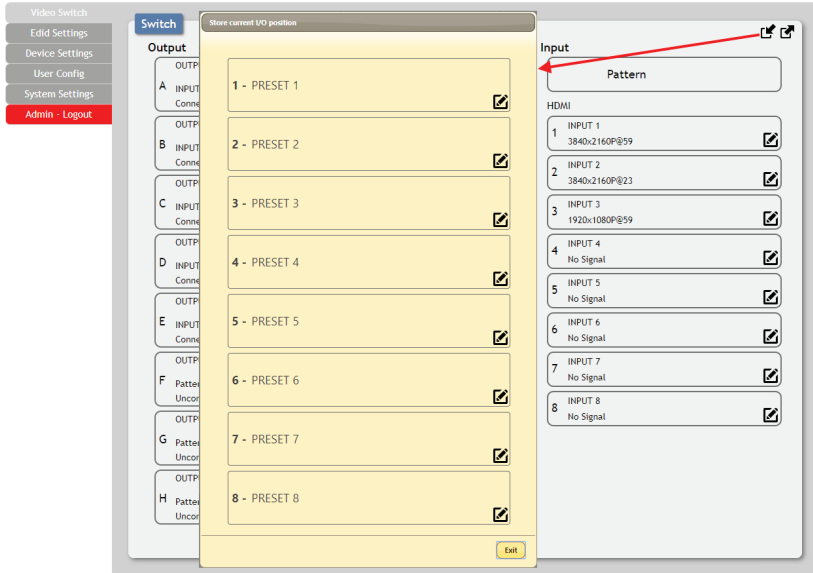

- **Store:** Once you have the matrix set the way you like, you can click the “Preset Store” icon (📌) in the upper right corner of the window and the Preset Store window will open. Hovering the mouse over each button will display the current routing stored within it. You may also name the Preset at this stage by selecting the “Edit” icon (✎). Click the center of the Preset’s button to store the current routing state in that Preset.
- **Recall:** When you wish to load a previously stored Preset, please click the “Preset Recall” icon (📌) and you will be presented with a choice of the 8 available Presets. Hovering the mouse over each button will display the routing stored within it. The Preset will load immediately upon clicking the button.

2. EDID Settings

This matrix provides the option of six standard EDIDs, eight sink sourced EDIDs and eight user uploaded EDIDs that can be assigned to each input port individually. The names of the eight user uploaded EDIDs can be changed if desired.

Video Switch

Edid Settings

Device Settings

User Config

System Settings

Admin - Logout

EDID

Customer EDID Settings

1

USER1

Save Name

Download

Upload

2

USER2

Save Name

Download

Upload

3

USER3

Save Name

Download

Upload

4

USER4

Save Name

Download

Upload

5

USER5

Save Name

Download

Upload

6

USER6

Save Name

Download

Upload

7

USER7

Save Name

Download

Upload

8

USER8

Save Name

Download

Upload

Sink EDID Download

Select

Download

Set EDID Input content

Set EDID of all input port

APPOINT

1

INPUT 1

from

UHD+ MCH

2

INPUT 2

from

UHD+ MCH

3

INPUT 3

from

UHD+ MCH

4

INPUT 4

from

UHD+ MCH

5

INPUT 5

from

UHD+ MCH

6

INPUT 6

from

FHD 2CH

7

INPUT 7

from

FHD 2CH

8

INPUT 8

from

FHD 2CH

Edid Source

FHD 2CH

USER3

Sink C

FHD MCH

USER4

Sink D

UHD 2CH

USER5

Sink E

UHD MCH

USER6

Sink F

UHD+ 2CH

USER7

Sink G

UHD+ MCH

USER8

Sink H

USER1

Sink A

USER2

Sink B

Customer EDID Settings

To upload a user EDID, please click the “Upload” button next to the Customer EDID Settings item you would like to change. An EDID Upload window will appear, allowing you to locate and upload the preferred EDID file (*.bin format) from a local PC. Once the correct file has been selected, please click the “Upload” button in the window, and the file will be transferred to the matrix.

To save an existing user EDID to your local PC please press the “Download” button next to the EDID you would like to save. Depending on your browser settings you will either be asked where to save the downloaded file, or the file will be transferred to the default download location on your

PC. To change the name of a Customer EDID, type the new name in the space provided, then click on the “Save Name” button.

Sink EDID Download

To save the EDID from one of the connected displays to your local PC, select the appropriate sink from the dropdown list then press the “Download” button. Depending on your browser settings you will either be asked where to save the downloaded file, or the file will be transferred to the default download location on your PC.

Set EDID Input Content

The Set EDID Input Content section provides controls for assigning EDID to the matrix’s inputs. Selecting “Appoint” allows for different EDID to be assigned to each individual input, selecting “ALL” allows for a single EDID to be assigned to all inputs.

EDID Source

Click on the preferred input(s) to open the EDID Source management window. Multiple inputs can be selected at once, if desired. Select the new EDID source to use and the change will occur immediately.

Note: In most cases, assigning a new EDID to an input will cause the affected input to briefly blink out while the source adapts to the new information.

Unit's Default EDIDs

This matrix provides the following 6 default EDIDs:

FHD/2CH	1920×1080p@60Hz (148MHz), 8-bit colour	LPCM 2.0
FHD/MCH	1920×1080p@60Hz (148MHz), 8-bit colour	LPCM 7.1 & Bitstream
UHD/2CH	3840×2160p@30Hz (297MHz), Deep Colour (8/10/12-bit)	LPCM 2.0
UHD/MCH	3840×2160p@30Hz (297MHz), Deep Colour (8/10/12-bit)	LPCM 7.1 & Bitstream
UHD+/2CH	3840×2160p@60Hz (594MHz), Deep Colour (8/10/12-bit)	LPCM 2.0
UHD+/MCH	3840×2160p@60Hz (594MHz), Deep Colour (8/10/12-bit)	LPCM 7.1 & Bitstream

Note: In some rare cases it is possible for custom or external EDIDs to cause compatibility issues with certain sources. If this happens, it is recommended to switch to one of the 6 default EDIDs for maximum compatibility.

3. Device Settings

This page provides control over the matrix's hardware related settings and options including USB port power, IR and fan control.

USB Power Supply

Provides controls to turn the power supplied by each USB port on or off.

IR Channel

Use the dropdown to select the IR channel used to control the matrix using the included remote. If this setting is changed, the dipswitches inside the remote control's battery compartment must also be changed to match.

Note: By default both the remote and the unit are set to channel 15.

IR Discrete Custom Code

Allows setting the discrete IR code prefix, primarily for use with learning remotes, to control the functions of this matrix.

Note: To obtain a complete list of IR control codes please contact your authorised dealer.

Temperature & Fan Settings

Provides information about the unit's current temperature and the speed of both internal fans. The fan mode can be switched between "Always On" and "Auto". By default, the fan control is set to "Always On".

4. User Config

This tab provides User Configuration options including changing the password for the Administrator account, and both the user name and password for the General User account.

Web & Telnet Login Configuration

Administrator

Old Username

Old Password

New Username

New Password

Confirm New Password

General User

New Username

New Password

Confirm New Password

Note: The General User account has limited access to the WebGUI and can only change video routing, store/recall presets, and modify the General User's own account settings.

5. System Settings

This tab provides system information, power control, Ethernet configuration options, system configuration backup/restore, and firmware update functions.

Power

Press this switch to toggle the unit's power between ON and OFF (standby mode).

Note: While in standby mode the unit's WebGUI, Telnet and RS-232 controls are still active.

Network

IP mode may be switched between Static IP or DHCP. In Static IP mode the IP, netmask and gateway addresses may be manually set. When in DHCP mode, the unit will attempt to connect to a local DHCP server and obtain IP, netmask and gateway addresses automatically. Please press "Save" after making any changes to the IP configuration or mode.

Note: The unit's default IP address is 192.168.1.50. If the IP address is changed then the IP address required for WebGUI/Telnet access will also change accordingly.

Download Current Configuration

The current system configuration, including routing and presets, may be saved as an XML file to a PC. Click the "Download" button to save the current system configuration to your local PC.

Restore Current Configuration

Previously saved system configurations may be restored from a saved XML file. Click the “Choose File” button to locate the saved XML file, then click the “Restore” button.

Reset to Default

Press this button to reset the unit to its factory default state. After the reset is complete, the unit will reboot automatically.

Firmware Upgrade


To update the unit's firmware, click the “Choose File” button to open the file selection window and then select the firmware update file (*.bin format) located on your local PC.

After selecting the file, click the “Upgrade” button to begin the firmware update process.

6. Admin - Logout

Clicking the red “Logout” tab will automatically log the currently connected user out of the WebGUI and return to login page.

7. CONNECTION DIAGRAM

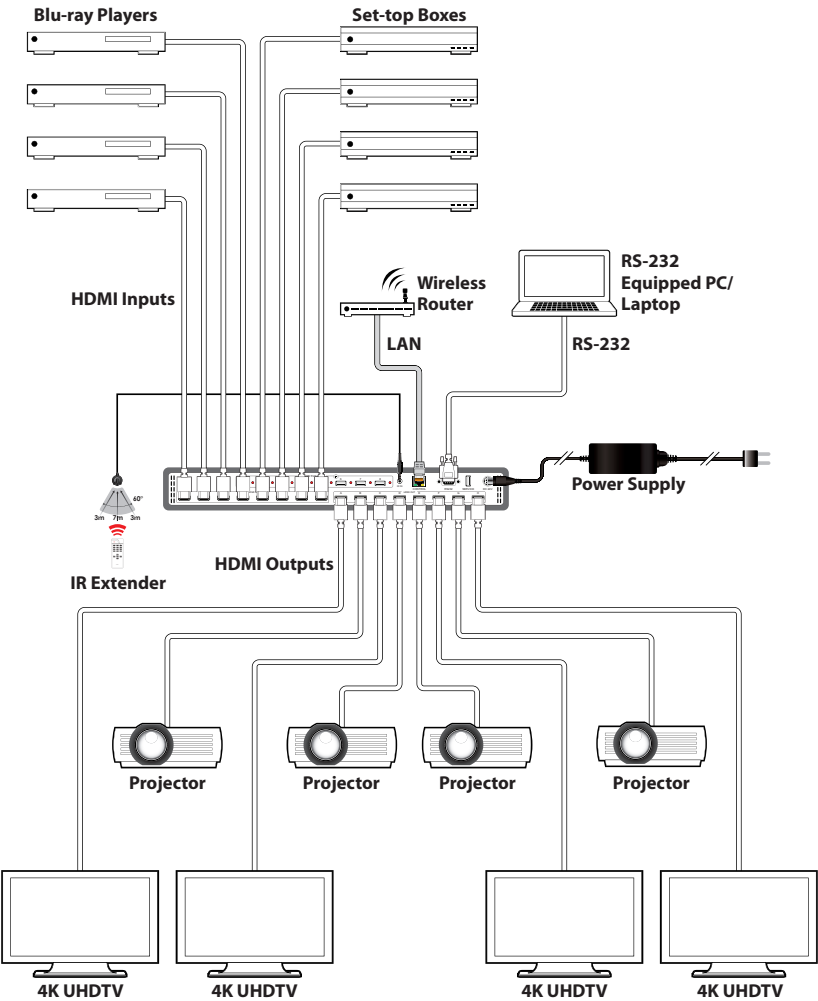

8. SPECIFICATIONS

8.1 Technical Specifications

Video Bandwidth	600MHz/18Gbps
Input Ports	8×HDMI
Output Ports	8×HDMI 8×USB Type A (Power only, 5V/1A)
Control Interfaces	1×IR Extender (3.5mm) 1×RS-232 (9-pin D-sub) 1×IP Control (RJ45)
Supported Resolutions	480i@60Hz - 4K@60Hz (4:4:4, 8-bit) VGA@60Hz - WUXGA@60Hz (RB)
HDMI Cable Length	10m (1080p@60Hz, 12-bit) 5m (4K@60Hz, 4:4:4, 8-bit)
IR Frequency	30 - 50kHz (30 - 60kHz under ideal conditions)
Baud Rate	19200bps
Power Supply	24V/6.25A DC (US/EU standards, CE/FCC/UL certified)
ESD Protection	Human Body Model: ±12kV (Air Discharge) ±8kV (Contact Discharge)
Dimensions	438mm×44mm×269mm (W×H×D) [Case Only] 438mm×49mm×274mm (W×H×D) [All Inclusive]
Weight	3,600
Chassis Material	Metal
Silkscreen Colour	Black
Operating Temperature	0°C - 40°C/32°F - 104°F
Storage Temperature	-20°C - 60°C/-4°F - 140°F
Relative Humidity	20 - 90% RH (Non-condensing)
Power Consumption	110W

8.2 Video Specifications

Supported PC Resolutions (Hz)		Input	Output
640×480	60, 72, 75, 85	✓	✓
720×400	85	✓	✓
800×600	56, 60, 72, 75, 85	✓	✓
1024×768	60, 70, 75, 85	✓	✓
1152×864	75	✓	✓
1280×768	60, 75	✓	✓
1280×800	60, 60 (RB)	✓	✓
1280×960	60	✓	✓
1280×1024	60	✓	✓
1360×768	60	✓	✓
1366×768	60	✓	✓
1400×1050	60, 60 (RB)	✓	✓
1440×900	60, 60 (RB)	✓	✓
1600×900	60	✓	✓
1600×1200	60	✓	✓
1680×1050	60, 60 (RB)	✓	✓
1920×1200	60 (RB)	✓	✓

Supported TV Resolutions (Hz)		Input	Output
720×480i	59.94, 60	✓	✓
720×576i	50	✓	✓
720×480p	59.94, 60	✓	✓
720×576p	50	✓	✓
1280×720p	50, 59.94, 60	✓	✓
1920×1080i	60	✓	✓
1920×1080p	23.97, 24, 25, 29.97, 30, 59.94, 60	✓	✓
3840×2160p	24, 25, 30	✓	✓
3840×2160p	50, 60 (4:2:0)	✓	✓
3840×2160p	50, 60 (4:4:4)	✓	✓
4096×2160p	24	✓	✓

9. ACRONYMS

ACRONYM	COMPLETE TERM
CEC	Consumer Electronics Control
CLI	Command Line Interface
DVI	Digital Visual Interface
EDID	Extended Display Identification Data
GUI	Graphical User Interface
HD	High-Definition
HDCP	High-bandwidth Digital Content Protection
HDMI	High-Definition Multimedia Interface
HDR	High Dynamic Range
HTTP	HyperText Transfer Protocol
IP	Internet Protocol
IR	Infrared
LCD	Liquid-Crystal Display
LPCM	Linear Pulse-Code Modulation
OSD	On-Screen Display
PC	Personal Computer
UHD	Ultra-High-Definition
USB	Universal Serial Bus
VGA	Video Graphics Array (640×480@60Hz)
WUXGA	Wide Ultra Extended Graphics Array (1920×1200@60Hz)



CIE-Group Ltd, 3 Widdowson Close, Blenheim Industrial Estate, Bulwell,
Nottingham, NG6 8WB

Tel: +44 (0)115 977 0075 | Fax: +44 (0)115 977 0081

Email: info@cie-group.com

www.cie-group.com

v1.00