




S-KEY

Simple. Safe. Secure.

HOW TO ENROLL YOUR S-KEY CARD

When you receive your new S-Key biometric access card, follow these step-by-step instructions to start using it.

NOTE: Your access control system admin will need to set the new S-Key up with your installed system. This process will include granting the card the necessary access rights, and will be specific to your system. For this, the S-Key can be treated exactly like a (non-biometric) Mifare card.

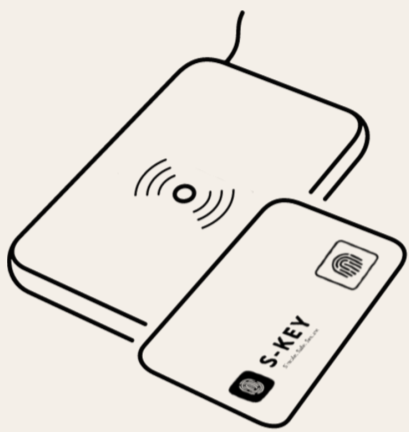

STEP 1. SYSTEM ENROLMENT

Place the unenrolled S-Key card on the reader to set-up with your access control system. This is the same process you would use for a new, blank Mifare® card, and will be specific to your installed system.




STEP 2. SCAN YOUR FINGER

Keep the S-Key card in place on the reader (e.g. using your other hand) to keep it powered. A blinking green LED will indicate it is ready for enrolment. Place your chosen finger on the sensor - the LED will briefly flash faster to show a successful fingerprint capture.



STEP 3. REPEAT

Lift your finger from the sensor, keeping the card on the reader. Place it back on the sensor and wait until the LED briefly flashes faster. Repeat lifting and placing your finger until you get a single long green pulse. **(Typically 12 Captures)**

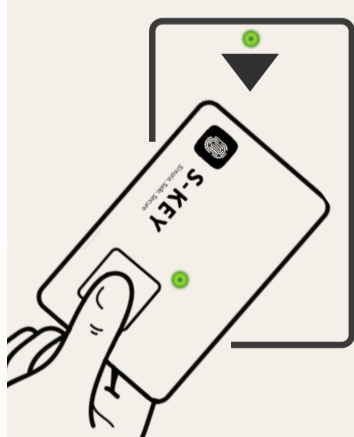

STEP 4. DONE

You can now use your S-Key card: place your enrolled finger on the fingerprint sensor and present the card to a reader. You will see a green LED flash if your finger is authenticated, or a solid red LED for an unauthorised finger.

FOR FURTHER ASSISTANCE, CONTACT YOUR LOCAL DISTRIBUTOR OR EMAIL INFO@FREEVOLT.TECH



<https://www.freevolt.tech>