




**TSD-PA122G**  
**2x12W Global Audio Amplifier**



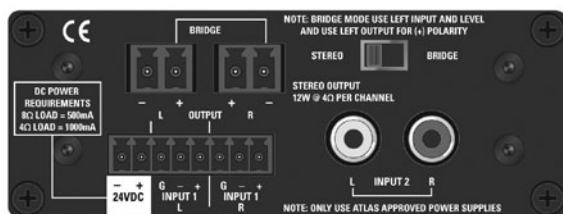

## **TSD-PA122G** **2x12W Global Audio Amplifier**

## **Owner's Manual**

### **Description**

The Atlas Sound TSD-PA122G is a reliable, cost-effective  $\Omega$  stereo amplifier perfectly suited for almost any general amplification requirement. The unit is especially suited for adding sound reinforcement to small projector systems as it provides ample power to drive up to four 8 loudspeakers in a classroom or boardroom application.

The TSD-PA122G features a balanced stereo phoenix style connector and unbalanced RCA input options with an output of 12W per channel at  $\Omega$ 4 or 24W bridge mono at  $\Omega$ 8. Front panel gain controls provide adjustment for both left/right or bridged outputs and these removable knobs can easily be replaced with the included tamper-resistant security covers.

The TSD-PA122G is part of a full line of Atlas Sound Time Saving Devices. These compact (1.5" x 4" x 2.75") units are designed to solve some of the common audio system problems in the easiest, most efficient, and cost-effective way. All models are made from high quality components and include removable individual I/O connectors for quick and precise wiring, separate ground terminals for all I/Os assuring secured connections, and removable level controls that can be replaced with tamper-resistant security covers. The TSDs are highly efficient and meet most energy standards as one 24V DC power supply (available separately) can power multiple Atlas Time Saving Devices.

### **Features**

12W per Channel into  $\Omega$

24W Bridged into  $\Omega$

(2) Balanced Inputs

- Dual RCA Inputs
- Removable Level Controls with Set-It-And-Forget-It Security Covers
- Peak Indicator per Channel
- Input Signal Indicator per Channel
- Cable Management System
- Multiple Mounting Configurations
- Separate Ground Connections
- Removable Phoenix Style I/O Connectors
- Meets Most Energy Standards
- Compact Chassis Design

### **Audio Applications**

- Projector Amplifier
- Zone Amplifier
- Rear Channel Amplifier

### **Installation**


- Courtroom
- Public Forums
- Churches
- Restaurants
- Schools
- Industrial Facilities
- House of Worship



**Atlas  
Sound**



### Front Panel Description

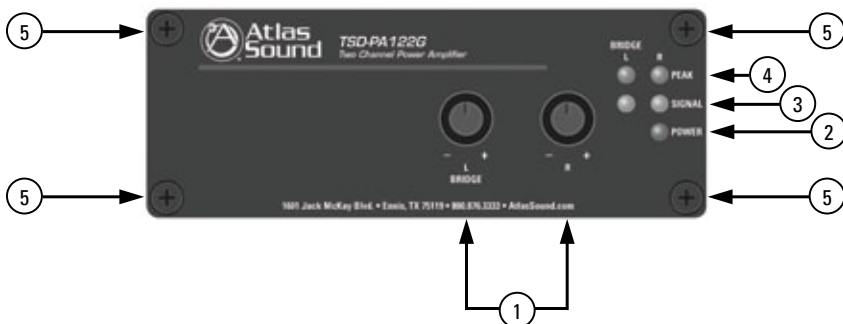


1. **Input Level Controls L & R** - Adjusts the gain of the source audio signal of both the left and right channels. Turn clockwise to increase the signal level and counter-clockwise to decrease the level. When in Bridge Mode, the Left Input control adjusts the audio level at the speakers. **Note:** The Input Level Control knobs can be removed and replaced with a supplied security cover to prevent unauthorized adjustment.
2. **Power LED** - Illuminates Blue when 24VDC power is present.
3. **Signal LED** - Illuminates Green when the input signal strength reaches 25mV to verify a signal path. There is an LED for each channel.
4. **Peak LED** - Illuminates Red when the input signal reaches 3dBV below when signal clipping will occur. Occasional flashing is normal but if this indicator is continuously On, then reduce the input level using the input level control on the front panel. There is an LED for each channel.
5. **Bracket Retainer Points** - Each TSD includes two mounting brackets for securing the TSD to a cabinet or wall. Remove screws and align the bracket with the panel hole before firmly tightening the screws.



## TSD-PA122G 2x12W Global Audio Amplifier

## Owner's Manual

### Rear Panel Description

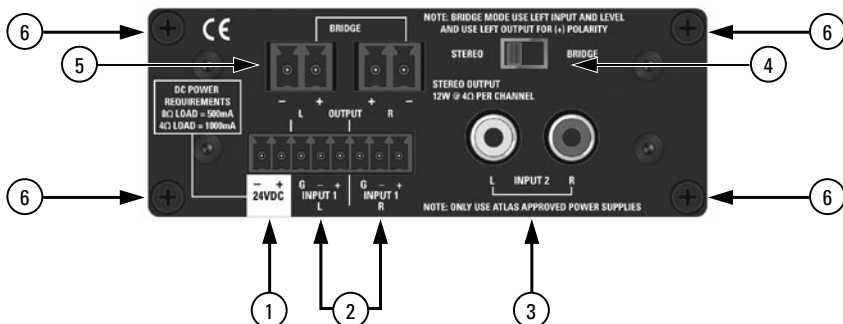

TSD Input/Output connections are removable for easy system wiring. The connectors have a 3.5mm pitch between pins.

- 1. DC Power Input** - Each TSD that requires DC power comes with a 2 position connector for an external 24VDC power supply (sold separately). Because of the TSDs low power consumption, a single external power supply may power more than one TSD. Please refer to the specifications on current requirements in milliamps to match with the appropriate power supply. Please observe the polarity of the wiring to this connector. **Note:** It is acceptable to exceed the current requirements of the TSDs but NOT safe to use a power supply that is below the current requirement of the device. When using an 8Ω speaker load, use a power supply with 500mA capacity (Atlas TSD-PS24V500MA). For 4Ω speaker loads, use a power supply with at least 1000mA capacity (Atlas TSD-PS24V2500MA).
- 2. Balanced Line Inputs L & R** - Connect balanced line level signals to these left and right phoenix style connectors. Your connection must be mated properly to the input connector or signal loss and/or noise may occur. **Note:** Unbalanced line level inputs can also be used by connecting the (G) and (-) terminals together.
- 3. RCA Inputs L & R** - Unbalanced audio signals applied to these female RCA connectors are controlled from the front panel L & R control knobs.
- 4. Stereo/Bridge Switch** - Select whether the PA122G operates as a stereo 2-channel amplifier or a single channel with the speaker load bridged across the two outputs. The minimum Stereo mode load is 4Ω and the minimum Bridged mode load is 8Ω. It is recommended that the power is removed from the PA122G when switching between operating modes.
- 5. Speaker Outputs L & R** - Connect the loudspeaker wiring to these terminals, observing the polarity shown on the rear of the chassis. When in stereo mode, a polarity reversal on one channel will cause poor bass response and low output levels. In Bridged Mode, connect the 8Ω speaker load across the left speaker output (+) terminal and the right speaker output (-) terminal.



6. **Cable Management Retainer Points** - Use the rear panel screws for connecting the included cable retainers. Each TSD comes with two cable retainers for simplified cable management.

### Knob and Security Cover

All front panel level controls feature a removable knob that can be replaced with included security covers to prevent potentiometer damage or unwanted changes.

- **Knob Installation** - Turn the potentiometer shaft fully counter-clockwise. Align the knob indicator to the lowest setting on the panel and the potentiometer shaft slot. Carefully press the knob onto the potentiometer shaft. Do not force or damage may occur to the potentiometer.
- **Security Cover Installation** - Remove the knob from the panel and insert the cover. Do not force or damage may occur to the potentiometer. Small pliers may be required to remove the knobs.

### Mounting

There are three ways to securely mount this TSD:


1. **Velcro™** - Each unit includes industrial-grade Velcro™ with adhesive backing to adhere to any flat surface.
2. **Brackets** - Each unit includes two mounting brackets to secure to a cabinet or wall.
3. **Rack Mount Panel** - The optional TSD-RMK rack mount panel supports up to four TSDs in a 1RU space.



# TSD-PA122G 2x12W Global Audio Amplifier

## Owner's Manual

### Block Diagram

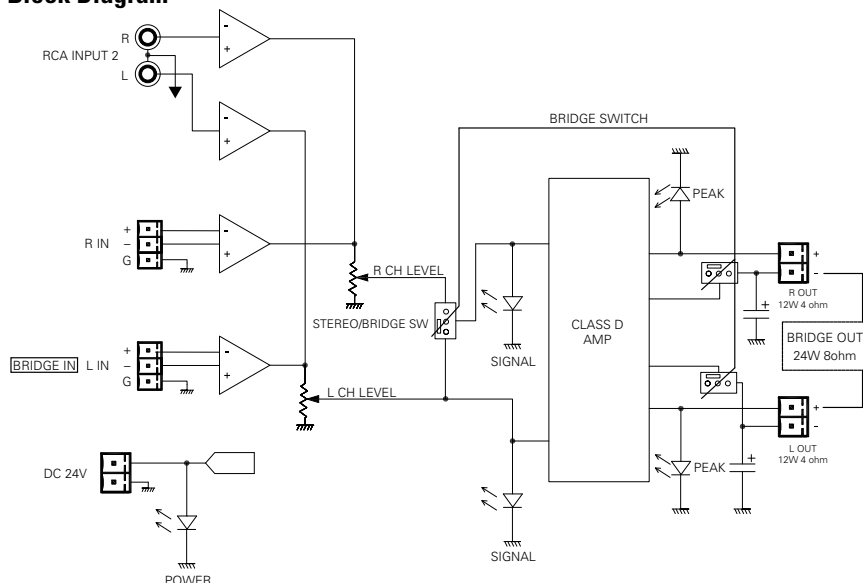

### Specifications

#### Description

Two Channel Amplifier

#### Load Rating

8 $\Omega$  - 6W x 2 CH

4 $\Omega$  - 12W x 2 CH

8 $\Omega$  Bridge Mode - 24W x 1 CH

#### Chassis Color

Black

#### Chassis Material

Aluminum

#### Inputs

##### Type

Qty 2, Unbalanced

##### Connection

RCA Left and Right

##### Impedance

10K $\Omega$

##### Input Level

316mV (-10dBV)

##### Type

Qty 2, Balanced Line

##### Connection

Removable 3 Position Captive Screw 3.5mm Spacing

##### Impedance

10K $\Omega$  Balanced, 5K $\Omega$  Unbalanced

##### Line Input Level

500mV (-6dB) Balanced

#### Outputs

##### Type

Qty 2, Speaker Output

##### Connection

Removable 2 Position Captive Screw 5mm Spacing

##### Wire Size

14 Gauge Max



Atlas  
Sound



Controls	
Level Control	Qty 2, Removable Knob with Security Cover
Operation Mode Switch	Stereo or Bridge

### Indicators

Input Signal	Green, 25mV On Threshold, Qty 2
Peak	Red, -3dB Before Clip, Qty 2
Power	Blue

### Electrical

Frequency Response	20Hz - 20kHz ( $\pm 3$ dB)
THD	1% @ 1kHz
Signal to Noise	80dBV

### Mounting

Velcro™	Industrial-Grade, Included
Brackets	Qty 2, Included
TSD-RMK	Optional 1 RU Rack Mount Panel (Supports 4 TSD Units)
Cable Retainer	Qty 2, Included

### Power Requirements

**Note: All Current and Watt data is based on AC power consumption using the TSD-PS24V2500mA Power Supply.**

	8 $\Omega$	4 $\Omega$
Voltage	24VDC 500mA	24VDC 1000mA
Idle Current	40mA	40mA
Idle Watts	2.7W	2.7W
Average Current	140mA	250mA
Average Watts	10W	20W
Max Current	510mA	510mA
Max VA Watts	38W	38W
Dimensions	H 1.5" (39mm) x W 4" (101mm) x D 2.75" (70mm)	
Weight	6oz, .165kg	

### Accessories

TSD 24VDC Power Supplies  
TSD-RMK 1 RU Rack Panel

### Safety and Certifications

External Power Supply cUL, CE, RoHS, TUV



**Atlas  
Sound**



## Limited Warranty

All products manufactured by Atlas Sound are warranted to the original dealer/installer, industrial or commercial purchaser to be free from defects in material and workmanship and to be in compliance with our published specifications, if any. This warranty shall extend from the date of purchase for a period of three years on all Atlas Sound products, including SOUNDOLIER brand, and ATLAS SOUND brand products except as follows: one year on electronics and control systems; one year on replacement parts; and one year on Musician Series stands and related accessories. Additionally, fuses and lamps carry no warranty. Atlas Sound will solely at its discretion, replace at no charge or repair free of charge defective parts or products when the product has been applied and used in accordance with our published operation and installation instructions. We will not be responsible for defects caused by improper storage, misuse (including failure to provide reasonable and necessary maintenance), accident, abnormal atmospheres, water immersion, lightning discharge, or malfunctions when products have been modified or operated in excess of rated power, altered, serviced or installed in other than a workman like manner. The original sales invoice should be retained as evidence of purchase under the terms of this warranty. All warranty returns must comply with our returns policy set forth below. When products returned to Atlas Sound do not qualify for repair or replacement under our warranty, repairs may be performed at prevailing costs for material and labor unless there is included with the returned product(s) a written request for an estimate of repair costs before any nonwarranty work is performed. In the event of replacement or upon completion of repairs, return shipment will be made with the transportation charges collect.

EXCEPT TO THE EXTENT THAT APPLICABLE LAW PREVENTS THE LIMITATION OF CONSEQUENTIAL DAMAGES FOR PERSONAL INJURY, ATLAS SOUND SHALL NOT BE LIABLE IN TORT OR CONTRACT FOR ANY DIRECT, CONSEQUENTIAL OR INCIDENTAL LOSS OR DAMAGE ARISING OUT OF THE INSTALLATION, USE OR INABILITY TO USE THE PRODUCTS. THE ABOVE WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Atlas Sound does not assume, or does it authorize any other person to assume or extend on its behalf, any other warranty, obligation, or liability. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

other trademarks are the property of their respective owners. ATS003945 RevD 8/11